


WILDERNESS PRODUCTS

FJ CRUISER FACTORY ROOF RACK
AX AND SHOVEL MOUNT

PART # 55920



Page 1 of 1

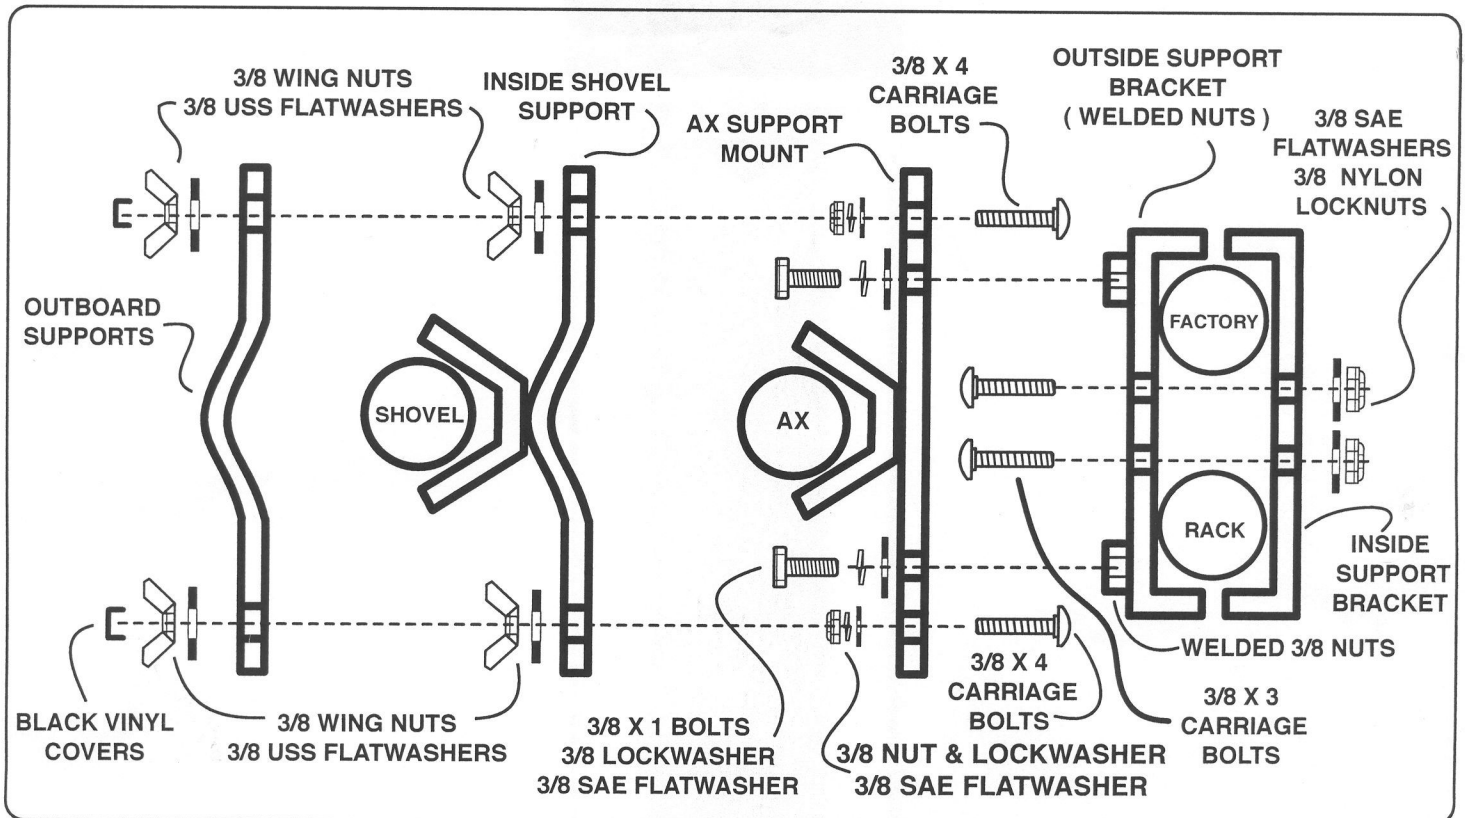

PARTS LIST

2 - INSIDE SUPPORT BRACKETS
2 - OUTSIDE SUPPORT BRACKETS
(WELDED 3/8 NUTS)

2 - AX SUPPORT MOUNTS
2 - INSIDE SHOVEL SUPPORT MOUNTS
2 - OUTBOARD SUPPORTS

HARDWARE LIST

4 - 3/8 BLACK VINYL COVERS
4 - 3/8 X 1 BOLTS
4 - 3/8 X 3 CARRIAGE BOLTS
4 - 3/8 X 4 CARRIAGE BOLTS
12 - 3/8 SAE FLATWASHERS (13/16" DIA.)

8 - 3/8 USS FLATWASHERS (1" DIA.)
4 - 3/8 NUTS
8 - 3/8 LOCKWASHERS
4 - 3/8 NYLON LOCKNUTS
8 - 3/8 WINGNUTS

ASSEMBLY INSTRUCTIONS

- 1 - INSTALL INSIDE AND OUTSIDE SUPPORT BRACKETS TO FACTORY ROOF RACK, SPACE OUT ABOUT 12" TO 15" APART AND TIGHTEN BOLTS.
- 2 - SECURE AX SUPPORT MOUNT TO OUTSIDE SUPPORT BRACKET AND TIGHTEN BOLTS
- 3 - INSTALL 3/8 X 4 CARRIAGE BOLTS INTO AX SUPPORT BRACKET AND TIGHTEN
- 4 - INSTALL AX TO MOUNT AND SECURE WITH THE SUPPORT AND WINGNUTS.
- 5 - INSTALL SHOVEL AND SECURE WITH OUTBOARD SUPPORTS AS SHOWN.
- 6 - ADJUST AX AND SHOVEL AND RE-CHECK ALL MOUNTING HARDWARE FOR TIGHTNESS